




Instruction Manual

SNOWDON

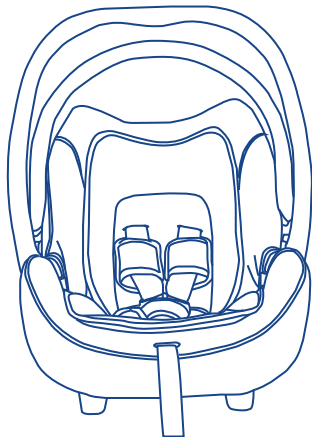

EST-402

Group 0+

Birth to 13kg

(Approximately Birth to 12-15 months)

ECE R 16 No 44.04

Before using your new car seat it is important to fully understand how to install your car seat properly, secure your child correctly and familiarize yourself with the features and functions of the seat.

Please take the time to read and understand these instructions fully. This is best done with the seat in front of you.

Please always read the safety warnings.

Before using the seat in your vehicle you should prepare the seat for your child.




EST- 402 Car Seat


PARTS AND INTERIOR EQUIPMENT



EST- 402 Car Seat

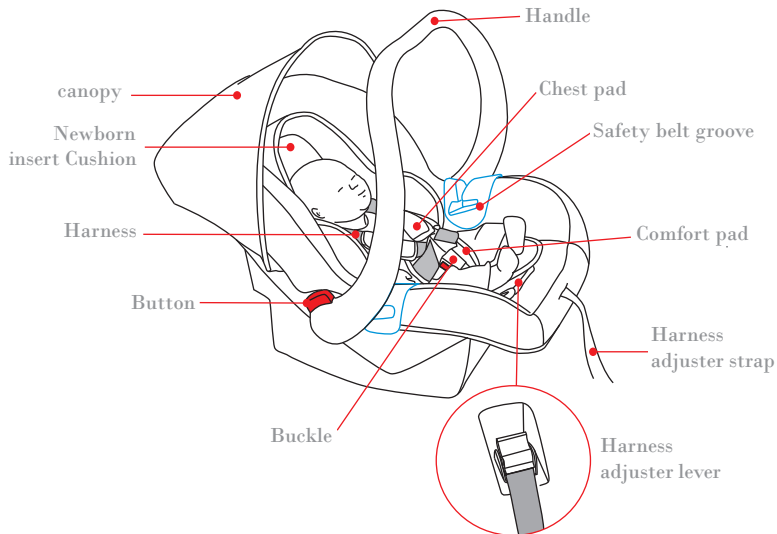

EST- 402 Car Seat

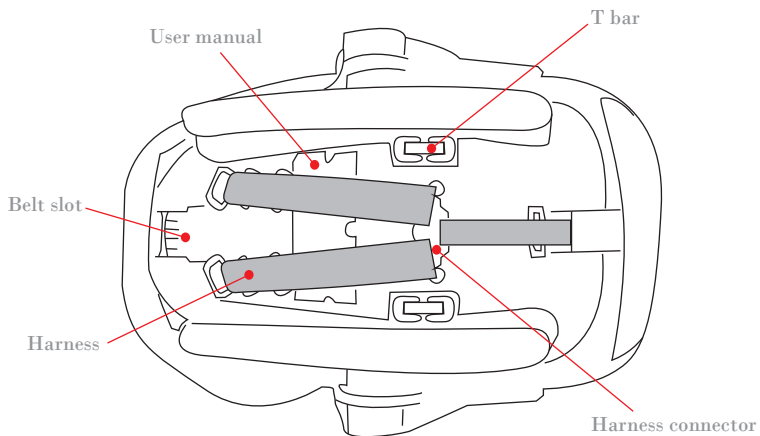

EST- 402 Car Seat

NOTICE

1. This is a “Universal” child restraint, it is approved to Regulation NO.44,04series of amendments,for general use in vehicles and it will fit most,but not all car seats.
2. A correct fit is likely if the vehicle manufacturer has declared in the vehicle handbook that the vehicle is capable of accepting a “Universal”child restraint for this age group.
3. This child restraint has been classified as “Universal” under more stringent conditions than those which applied to earlier designs which do not carry this notice.



EST- 402 Car Seat

4. If in doubt, consult either the child restraint manufacturer or the retailer.

Only suitable if the vehicle is fitted with 3-point safety belts, Approved to UN/ECE Regulation No.16 or other equivalent standards.

Vital information-READ NOW

For your child's safety please read these instructions carefully before use and keep them for future reference. Failure to follow the instructions contained in this manual could result in serious injury to your child.

EST- 402 Car Seat

1. This instruction manual can be retained in the special space of the child seat for its life period.
2. Do not use this child safety seat at the home. It has not been designed for home use and should only be used in your car.
3. Never leave your child unattended in the child restraint system even for a short time.
4. The child safety seat should be changed when it has been subject to violent stresses in an accident.



EST- 402 Car Seat

5. This child restraint should be securely belted in the vehicle even when not in use. In a crash or sudden stop, an unsecured child safety seat may injure other occupants.

6. Always make sure that any straps holding the child restraint to the vehicle are tight. Any straps restraining the child should be adjusted to the child's body and check that the straps are **NOT** twisted.

7.IMPORTANT! Ensuring that any lap straps is worn low down, so that the pelvis is firmly engaged.



EST- 402 Car Seat

8. Do not use any load bearing contact points other than those described in the instructions and marked in the child restraint.

9. Any luggage or other objects liable to cause injuries in the event of a collision shall be properly secured.

10. The rigid items and plastic parts of a child restraint must be so located and installed that they are not liable, during everyday use of the vehicle to become trapped by a moveable seat or in a door of the vehicle.



EST- 402 Car Seat

11. To prevent from the risk of fall, your child should always be fastened.

12. It is dangerous to make any alteration or additions to the device without the approval of the competent authority, and a danger of not following closely the installation instructions provided by the child restraint manufacturer.

13. This child safety seat is designed for children from 0 to 13 kg. Never overload the child safety seat more than one child or with other loads.

EST- 402 Car Seat

14. The child restraint must not be used without the cover.

15. The seat cover should not be replaced with any other than the one recommended by the manufacturer, because the cover constitutes an integral part of the restraint performance.

16. Before you adjust any movable or adjustable parts of your child safety seat, you must remove your baby from the child safety seat.

17. The child safety seat should be kept away from sunlight if the seat is not provided with a textile, otherwise it may be too hot for the child's skin.



EST- 402 Car Seat


18. Never use a second-hand product, as you can never be certain what was happened to it.

19. **NOTICE :** Do not use in any configuration not shown in the instructions.

EST-402 Car Seat

Safety Instruction

Only suitable if the approved vehicles are fitted with 3 point safety-belts, approved to UN/ECE Regulation No.16 or other equivalent standards.

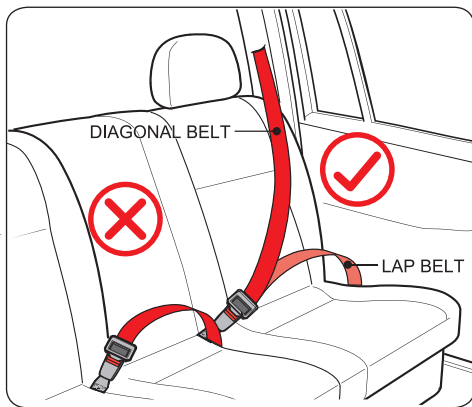


Using safety seat in this way

Forward facing traffic direction	Correct
Back facing traffic direction	Error
Vehicle is only fitted with 2 - point safety belt	Error
Vehicle is fitted with 3 - point safety belt	Correct
Seat beside the driver	Correct
Rear seat	Correct
Rare middle seats three-point belt	Correct

Please carefully implement the Country Traffic Safety Regulations

- Do not install the child safety seat at the front seat with airbag .
- Please read the instruction manual carefully on how to use the airbag

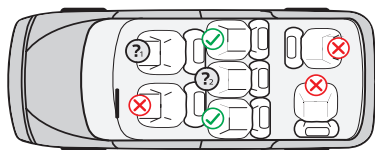

NOTICE

- ✓ Belt in this location
- ✗ Unable to install the position
- ❓ Do not install the child safety seat at the front seat with air bag.
- ❓ Only with the three point safety belt, can this location.

EST- 402 Car Seat

Securing your baby

For the protection of your baby



Always secure your baby in the baby seat using the seat belt.

Never leave your baby unattended in the baby seat when placing it on elevated surfaces (e.g.a table, nappy changing unit,etc.)

Never allow the strap end to become caught in moving parts(e.g.Automatic doors, escalators, etc).

EST- 402 Car Seat

- 1).Caution! The plastic parts of the baby seat heat up in the sun, so that your baby may get burnt. Protect your baby and the baby seat against intensive solar radiation(e.g.by putting a light cloth over the seat).
- 2).The baby seat requires only one seating position in the car. This advantage means, however, that your baby must be in a semi-reclined position.
- 3).Take your baby out of the baby seat as often as possible to relieve its spine, We recommend frequent breaks during long journeys. Even outside of the car, please avoid leaving your baby in the baby seat for too long.


EST- 402 Car Seat

Removing the newborn insert cushion

The newborn insert cushion is used to provide extra comfort for very small babies.

Caution! Only use the lying support when the shoulder belt is in the lowest slot position .

Slide shoulder belt out of 3 baron the back of the carrier.

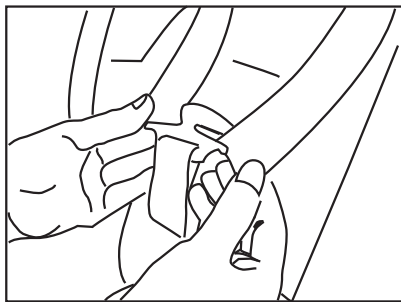


EST- 402 Car Seat

Removing the newborn insert cushion


Once you have taken out the belt you can then remove the newborn insert cushion.

Then put the belt through the upper slot and slide straps in 3 bar.

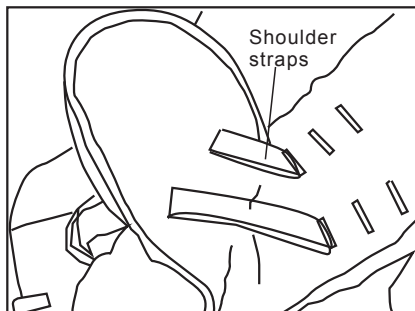

EST- 402 Car Seat


Adjusting the handle

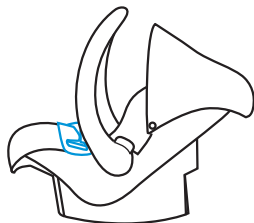

A:For carrying and for transport in the car



B:For placing your baby into the baby seat

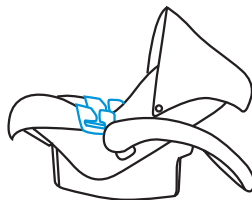

C:For setting the baby down safely outside the car seat

EST- 402 Car Seat

Adjusting the handle

You can engage the handle in three positions:

Simultaneously press both buttons on the handle. Then whilst holding the buttons pressed turn the handle backwards or forwards until it engages in the desired position.

EST- 402 Car Seat

Adjusting the shoulder strap height


A correctly adjusted shoulder strap height ensures your baby's optimal protection in the baby seat.

The shoulder strap height must be adjusted so that the shoulder straps are at the same level as your baby's shoulders or slightly below.

EST- 402 Car Seat

Loosening the shoulder straps

Press the adjuster button under the cover and at the same time pull both shoulder straps forward

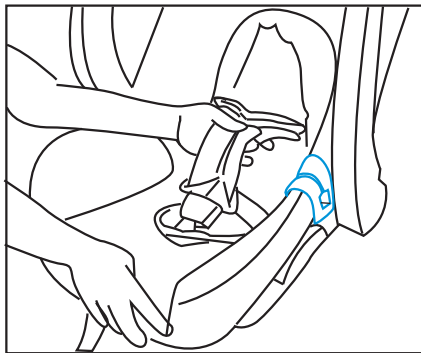

EST- 402 Car Seat

Securing your baby using the harness

Loosing the shoulder straps.

Open the harness buckle(press the red release button).
Put the tongue with the belt on the side ,the buckle is placed to the front so that the occupant place is free.

Place your baby into the child car seat

Put the shoulder straps over the shoulders of your baby.

Caution! Do not twist or interchange the shoulder straps.



EST- 402 Car Seat

Securing your baby using the harness

Loosing the shoulder straps.

Open the harness buckle(press the red release button). Put the tongue with the belt on the side, the buckle is placed to the front so that the occupant place is free.

Place your baby into the child car seat



Put the shoulder straps over the shoulders of your baby.

Caution! Do not twist or interchange the shoulder straps.



EST- 402 Car Seat

Securing your baby using the harness

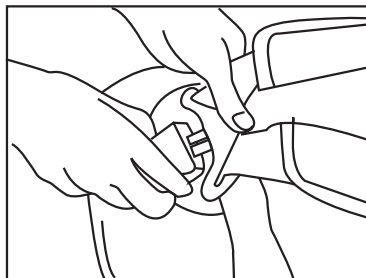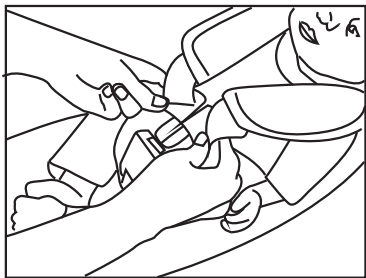

EST- 402 Car Seat

Securing your baby using the harness

Tighten the straps until they are in contact with your baby's body.

Put the two buckle tongues together and engage the harness buckle with an audible **CLICK!**

Caution! The hip belt must lie as low as possible

Removal

Press the side red button of harness to release five point harness, then pull the tongue from both sides and take your baby out.




EST- 402 Car Seat

Tightening the harness Pull the strap end.

Caution! Pull the harness adjuster strap straight towards you, not upwards or downwards.

Please pay attention to the strap end while travelling (especially outside the car) it should always be placed in the carrier.

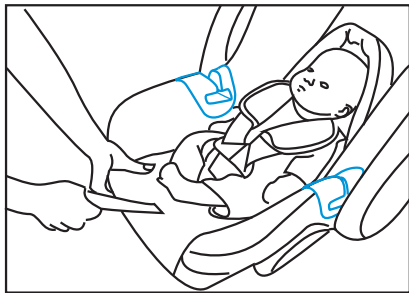

EST- 402 Car Seat

Checklist to ensure that your baby is buckled up correctly

For the safety of your baby, please check that:

- The shoulder straps of the baby seat are close to the body without constricting the baby.
- The shoulder straps are adjusted correctly.
- The shoulder straps are not twisted.
- The buckle tongues are engaged in the harness buckle.

EST- 402 Car Seat

Installation in the vehicle



Please do not leave your child unattended in the child safety seat in the vehicle.

For the protection of all vehicle occupants



In the case of an emergency stop or an accident unsecured persons or objects may cause injury to other vehicle occupants.

Please always check that:

*The backrests of the vehicle seats are locked(i.e.that a foldable rear seat bench latch is engaged).

EST- 402 Car Seat

Installation in the vehicle

- *All heavy or sharp-edged objects in the vehicle(e.g. on the parcel shelf) are secured.
- *All persons in the vehicle have their seat belts fastened
- *The child safety seat is always secured when it is in the vehicle, even if no child is being transported.

To protect your vehicle

*Some vehicle seat covers of sensitive materials(e.g. velour, leather, etc.) that may develop wear marks when child seats are used. This can be avoided by placing a blanket or towel under the child seat.



EST- 402 Car Seat

Securing the baby seat in your vehicle

To secure the baby seat using the 3-point belt of your vehicle proceed as follows:

Place the baby seat rearward-facing on the vehicle seat (baby is facing backwards).


Tip! In certain cases it is possible that the baby seat does not rest securely or is inclined too steeply on the vehicle seat. This can be remedied by placing the child seat in another seat.



EST- 402 Car Seat

Securing the baby seat in your vehicle

Ensure that the handle is in its upper position A. as below:

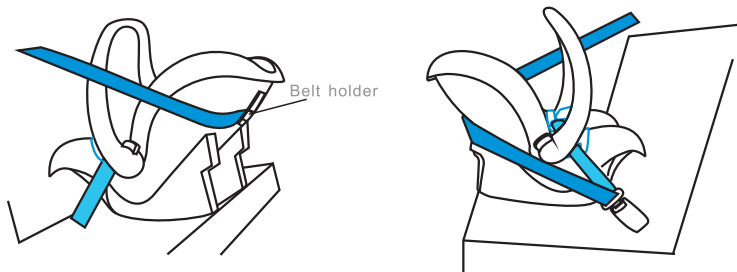

EST- 402 Car Seat

Securing the baby seat in your vehicle

Caution! Do not twist the belt.
Tighten up the diagonal belt section.

Removal

Slide diagonal belt out from belt holder slot to unhook diagonal belt section

Open the vehicle seat buckle and take the lap belt section out of the blue belt guides.

EST- 402 Car Seat

Checklist for the correct installation of your baby seat into your vehicle.


For the safety of your baby, please check that

- *The baby seat is installed rearward-facing.
- *The baby seat is only installed on the front passenger seat if nofront airbag can strike the baby seat
- *The baby seat is only secured using a 3-point belt
- *The diagonal belt section runs through the blue belt holder and the baby seat.


EST- 402 Car Seat

Checklist for the correct installation of your baby seat into your vehicle.

- *The vehicle seat buckle or belt is not positioned in or in front of lap belt holder,
- *The vehicle seat belt is tightened up and not twisted..

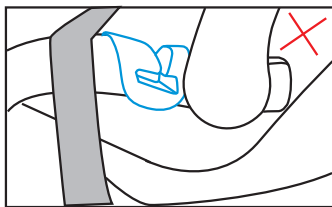

Wrong

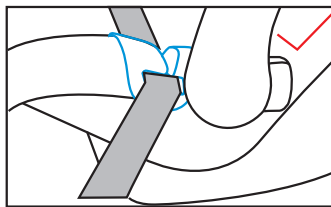


Right


EST- 402 Car Seat

Checklist for the correct installation of your baby seat into your vehicle.

- * The lap belt section runs through both blue belt guides on the baby seat, lie in the flute of both sides, see picture.

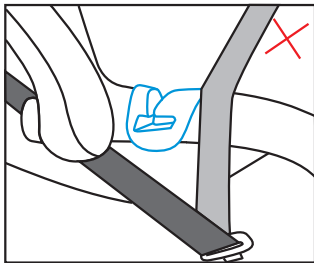

Wrong

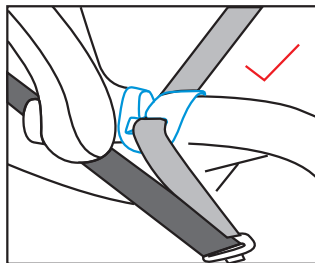

Right

EST- 402 Car Seat

Checklist for the correct installation of your baby seat into your vehicle.

*Don't use any load bearing other than those described in the Instructions.


*If you have any further questions relative to the main load bearing, please feel free to contact local retailer.



EST- 402 Car Seat

Fitting the canopy


Push fastener(A) of the canopy onto the other fastener(B).

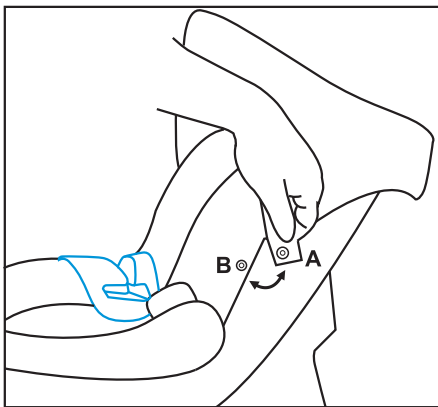

EST- 402 Car Seat

Care instructions

To retain the protective effect

 In an accident at a collision speed above 10 km/h the child seat could suffer damage which is not necessarily obvious. In this case, the child seat must be inspected by the manufacturer and if necessary replaced.

Regularly check all important parts for damage. Ensure the correct operation of all mechanical components.

To prevent damage or breakage, ensure that the child seat does not become jammed in the car door, seat runners, etc.

EST- 402 Car Seat

Care instructions

*To retain the protective effect

Should the child seat be damaged for example after dropping it.

it must be inspected by the manufacturer.

*Care for the harness buckle

The function of the harness buckle is important for the safety of your child.

EST- 402 Car Seat

Care instructions

Malfunctions of the harness buckle are mostly attributable to accumulations of dirt and dust.

Malfunction

The buckle tongues are ejected only slowly when the red release button is pressed.

The buckle tongues will no longer lock home are ejected again.

The buckle tongues engage without an audible "click".

EST- 402 Car Seat


Care instructions

The buckle tongues are difficult to insert you feel resistance.

The buckle only opens if extreme force is applied.

Remedy

Wash out the harness buckle so that it functions properly once again:

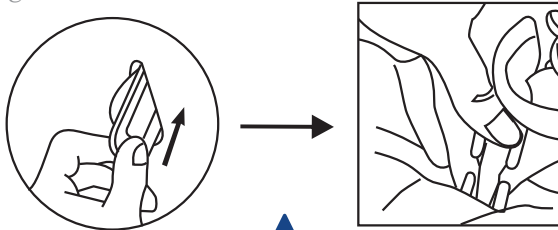

EST- 402 Car Seat

Care instructions

A) Removing the harness buckle

Open the harness buckle press the red release button.

Loosen the harness straps.

Tilt the baby seat backwards.

Push T bar, with which the harness buckle is fixed to the seat shell, on its side upwards through the belt slot.

B) Cleaning the harness buckle

Soak the buckle in warm water with dishwashing liquid for at least an hour.

Rinse and dry thoroughly.

EST- 402 Car Seat

Care instructions

C) Re-fitting the harness buckle

Push the metal plate on its side downwards through the belt slot in the cover and through the seat shell.

Check for correct fitting by pulling firmly on the harness buckle.

* Removing the harness

Unhook the shoulder straps as described above.

Pull out T bar which is used to fasten the strap to the bottom of the carrier shell. Total three piece of T bar.

Push the strap loop inwards from the short side of T bar and unhook the strap.

You can now pull the strap out.

EST- 402 Car Seat

Care instructions

*Removing the cover

Open the harness buckle press the red release button.

Unhook the shoulder straps from the connecting piece

Take the plastic buttons off the seat.


Pull the shoulder straps out of the belt slots of the baby shell.

Unthread the straps and the buckle tongues from the cover.

Unthread the harness buckle from the cover.

Unthread the shoulder pads.

You can now remove and the cover.

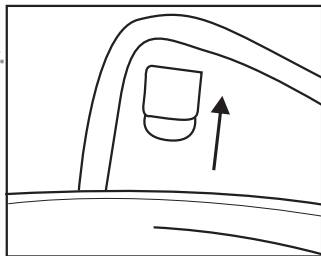

EST- 402 Car Seat

Care instructions

*Re-fitting the cover

Put the cover over the seat as paragraph 1.2 pictures.

*Installing the harness

Engage the buckle tongues in the harness buckle

Re-fitting the buckle

Now take the strap through the two slots of the baby shell.

Caution! Do not twist the belts.

Hook T bar into the strap loop first the long side and then the short side of the T bar

Hook the shoulder straps into place as described above

EST- 402 Car Seat

Maintenance and cleaning

*Maintenance Advice

To remove the cover .

- Separate the booster seat and the backrest .
- Open the velcro fastener and remove the cover of the booster seat
- Open the velcro fastener on the back side of the backrest and Remove the cover .
- Open the velcro fastener and remove the headrest.

EST- 402 Car Seat

Maintenance and cleaning

*Cover Removing and Cleaning

WARNING! TOXIC CLEANING FLUIDS CAN CAUSE ILLNESS NEVER USE BLEACH. DO NOT IRON, DO NOT MACHINE WASH, DO NOT TUMBLE DRY AS THIS COULD DAMAGE THE COVER AND REQUIRE REPLACING.

The car seat cover is removable and washable. In case of light staining, clean using a damp cloth or soapy water, The cover can be removed completely and hand washed up to 30 °C .

EST- 402 Car Seat

Maintenance and cleaning



Hand wash,
water
temperature
below 30°C



Do not bleach



Dry clean, any
solvent except
trichloroethylene



Do not tumble dry



Do not iron

*Additional information

Do not use this car seat on a shopping trolley.

This car seat is not approved for using on aircraft.