

COZY **N** SAFE[®]
Without Compromise...

Morgan i-Size



EST 173

Instruction Manual

Notice

Notice

This is an i-Size Enhanced Child Restraint System. It is approved according to UN Regulation No. 129, for use in, i-Size compatible vehicle **seating positions as indicated by vehicle manufacturers in the vehicle user's manual.**

If in doubt, consult either the Enhanced Child Restraint System manufacturer or the retailer.

Notice

This is an i-Size booster seat Enhanced Child Restraint System. It is **approved according to UN Regulation No. 129, for use primarily in "1- Size seating positions as indicated by vehicle manufacturers in the vehicle user's manual.**

If in doubt, consult either the Enhanced Child Restraint System manufacturer or the retailer.

Only suitable if the approved vehicles are fitted with 3 point safety-belts, approved to UN/ECE Regulation No. 16 or other equivalent standards.

COZY  SAFE®
Without Compromise...

Cozy N Safe

Oxford Street, Wolverhampton, West Midlands, WV14 7DP, UK.

Tel: +44 (0) 1902 494905

Fax: +44 (0) 1902 490211

Email: enq@cozynsafe.com

Website: www.cozynsafe.com

Contents

1. Important notice	2
2. Features	5
3. Use in the vehicle	8
4. Installing and removing the car seat	
4.1 ISOFIX ATTACHMENT installation	13
4.2 Top tether installation	15
4.3 40-87CM	16
4.4 76-105CM	19
4.5 100-125CM	22
4.6 ISOFIX ATTACHMENT removal	27
5. Seat adjustment	
5.1 Opening and closing side impact protection	28
5.2 Recline position adjustment	29
5.3 Forward and rearward rotation adjustment	29
5.4 Shoulder strap adjustment	30
5.5 Headrest height adjustment	31
5.6 Top tether adjustment	33
6. Installing and removing fabric cover	
6.1 Removing fabric cover	34
6.2 Installing fabric cover	36
7. Cleaning and maintenance	38
8. Steps to take after an accident	39
9. Warranty	39

1. Important notice

1. This child car seat is suitable for children whose stature is 40-105cm ($\leq 18\text{kg}$) and 100-125cm.
2. Please remove the instruction manual from the car seat and read carefully.

3. Please read carefully before installation, serious injury will occur if installed incorrectly. The manufacturer will not take any responsibility in this case.

4. Never use the child car seat without the cover. Never use any cover which is not recommended by the manufacturer to replace the old cover, as the cover constitutes an integral part of the child car seat performance.

5. When the child car seat is not provided with a textile cover, the chair should be kept away from sunlight, otherwise it may be too hot for the child's skin.

6. The customer is advised not to install the child car seats in seating positions where there is an active frontal airbag installed.

The child car seat should be replaced when it has been subject to violent stresses in an accident.

7. Please ensure all passengers in the car use their safety belts and that all loose goods are secured, otherwise the passengers and loose goods may cause injury to the child in the event of a collision or sudden braking.

9. Always confirm the child seat buckle is locked before use, in case of an emergency the child can be taken out quickly.

10. Do not make any changes or additions to the child car seat harness system as this could seriously affect its security and functionality.

11. The user should not make any alterations or additions to the child car seat without the approval of the manufacturer. It is dangerous to not follow the instruction manual provided by the manufacturer.
12. Ensure that the child is not left in the car seat unattended.
13. Ensure that the child car seat is kept away from corrosive substances.
14. Always keep the child car seat secured in the vehicle even when it is unoccupied, children are not to be left in their child car seat unattended.
15. Do not use a second-hand child car seat.
16. It is important to ensure that the lap strap is worn low down, and that any impact shield is installed properly, so that the pelvis is firmly engaged.
17. Any straps holding the child car seat to the vehicle should be tight, any straps restraining the child to the seat should be adjusted so they are suitable for the child's body and all straps should be checked so that they are not twisted.
18. Do not use any load bearing contact points other than those described in the instructions and marked on the child car seat.
19. Do not use the child car seat in the forward facing position when the child's stature is less than 76cm.
20. The instruction manual should be retained in the pocket on the child car seat for its lifetime. Please look after and keep the instruction manual safe.
21. The rigid items and plastic parts of the child car seat must be located and installed so that they are not likely, during everyday use of the vehicle to become trapped in the vehicle seat or door.
22. The child car seat should only be used in Forward or Rearward facing modes when in use.
23. Any luggage or other objects likely to cause injuries in the event of a collision should be properly secured.

24. If you have any questions about using and installing the child car seat, please contact the manufacturer.
25. Ensure that the buckle and child car seat fitting is checked prior to every journey.
26. The vehicle handbook should also be consulted when fitting this child car seat.
27. Ensure that food and drink are not consumed whilst the child is in the car seat as crumbs and liquid could spill and compromise the safety function of this car seat.

**IMPORTANT - DO NOT USE FORWARD FACING BEFORE
THE CHILD'S AGE EXCEEDS 15 months.**


2. Features-front

- 1 Headrest adjustment handle
- 2 Headrest
- 3 Shoulder straps
- 4 Shoulder pad
- 5 Harness buckle
- 6 Buckle pad
- 7 Cushion (Stature 40-87 cm)
- 8 Harness adjuster
- 9 Harness adjustment strap
- 10 Recline adjustment dial
- 11 Seat rotation lever
- 12 Shoulder strap guide hook



2. Features-back

- 13 Side Impact Protection
- 14 Side Impact Protection button
- 15 Top Tether
- 16 Top Tether fixing hook
- 17 Top Tether guide slot
- 18 Belt guide slot
- 19 ISOFIX second lock button
- 20 ISOFIX
- 21 ISOFIX release button
- 22 ISOFIX guide
- 23 Fabric cover plug
- 24 Instruction Manual Compartment

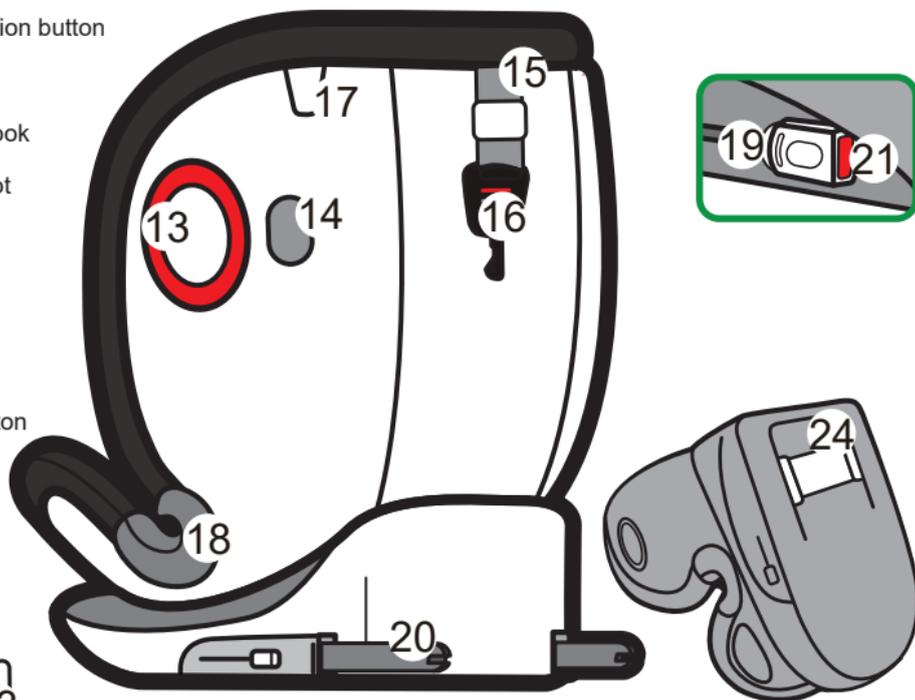

Seat parts

Accessories and instructions

Accessories placed on the seat



Shoulder pads



Buckle pad



Cushion

Accessories for seats



ISOFIX guides

These guides the ISOFIX bars on the car seat onto the vehicle anchor points for an easier installation.



Instruction Manual

The instruction manual is a detailed guide on how to use the car seat, it is kept in a compartment at the base of the seat.




Fabric cover plug

Use this to put the cover back onto the seat when it has been removed to be cleaned.

* Before use, please check all the accessories.

3. Use in the vehicle

In order to properly protect your child, please read the instruction manual and vehicle handbook carefully prior to installation of the car seat.

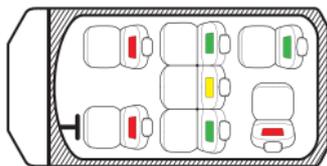

● Not installable ● Installable

- DO NOT use on a passenger seat with an enabled airbag.

WARNING

Do not use on a passenger seat with an active airbag. If hit by the airbag, death or serious injury may occur.



Car seat ISOFIX anchor point

Before using the ISOFIX and top tether belts, please check if the ISOFIX anchor point **A** is matched with the ISOFIX size category on the car seat.

⚠ Caution

Check the top tether belt hook and the anchor points are installed on the vehicle. There are generally 3 possible locations, please check your vehicle handbook for assistance locating these.

ISOFIX
Seat anchor point

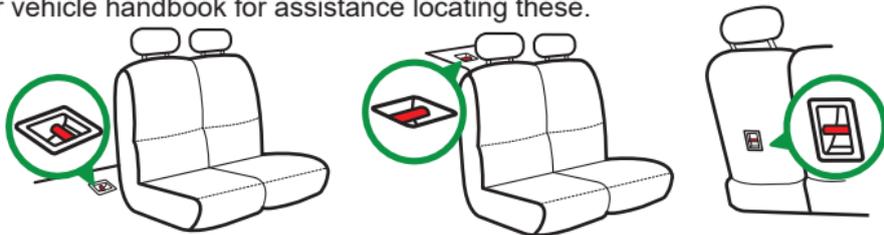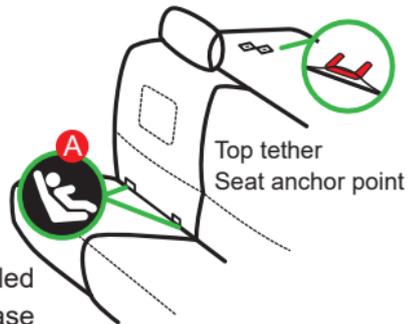

	ISOFIX size Category corresponding table
40-87cm	R2
76-105cm	F2X
105-125cm	B2

Car seat installation warning

! Danger

Incorrect installation may result in death or serious injury. Parents should check the car seat installation on every journey to eliminate any risks.



The car seat should not be installed in the vehicle middle seat.



The top tether belt hook and ISOFIX should be suitable with the anchor points in the vehicle, otherwise it is very dangerous.



DO NOT install the car seat on a passenger seat with an active airbag.

Child's sitting position

! Danger

Incorrect installation may result in death or serious injury. Parents should check the car seat installation on every journey to eliminate any risks.



This is the correct position for the child. Ensure that the chest pads go over the shoulders and connect into the buckle and the child's feet are either side of the harness adjuster.



DO NOT remove the harness when the vehicle is in motion as this may cause injury.



DO NOT twist the belt harness.



DO NOT allow the child to stand on the car seat.

4. Installing and removing the car seat

Installation


Always ensure that the child car seat is secured in the vehicle, even when it is not in use.

Installation modes			
40-87cm (rearward facing)	76-105cm (forward facing)	100-125cm (forward facing)	
ISOFIX+Top Tether +harness	ISOFIX+Top Tether +harness	EzFix + Vehicle 3-point Belt	Vehicle 3-point Belt
			
			
Suitable for: ≤13KG	Suitable for: ≤18KG	Approximate for: ≤25KG	Suitable for: ≤25KG

4.1 ISOFIX ATTACHMENT installation in vehicle

Step 1

If your vehicle is not equipped with ISOFIX guides **22**, please use the ones provided with this seat. The ISOFIX guides are clamped onto the ISOFIX anchor points, with the incision part facing upwards
(see illustration)

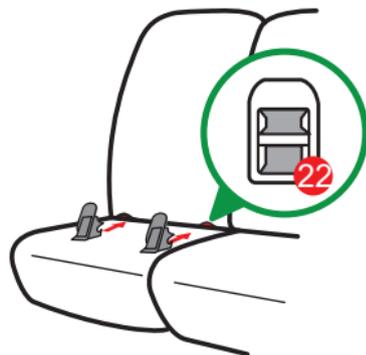


! Caution

The ISOFIX anchor point is located between the seat surface and the backrest.

Step 2

Press and hold the ISOFIX second lock button **19**, and ISOFIX release button **21** at the same time, and pull ISOFIX **20** away from the seat.

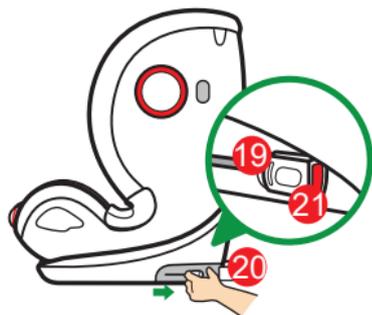

Step 3

Push the child seat base with both hands to insert into the guide sleeves, and push the child seat toward the backrest until the ISOFIX 20 has become attached to the anchor points on both sides. When you hear a "Click" sound and the ISOFIX adjustment button has turned green, the ISOFIX is locked in.

Step 4

Shake the child seat, and check whether all the locks are green, to ensure that the ISOFIX is firmly secured.

Tip!



The child seat must be as close as possible to the vehicle backrest.

Tip!

The left and right ISOFIX positions should be consistent. For your convenience you can first fit the ISOFIX on one side and then the other side if this is easier.

⚠ Caution

Only when the two ISOFIX 20 indicators turn green, is the ISOFIX properly engaged.

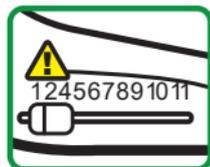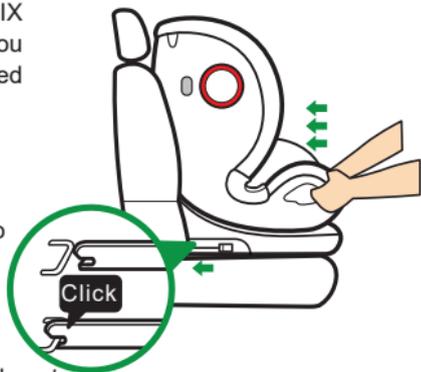

4.2 Top tether installation

Step 1

Attach the top tether hook **16** to the car seat anchor point as described in the vehicle handbook and tighten the top tether **15** (when the top tether is fully tightened the hook indicator will turn green)



! Caution


Do not use the luggage hook as a substitute for the top tether anchor point.



Tip!

Make sure that the top tether fixing hook and the anchor point are fastened.

There are 3 possible positions for the top tether anchor point.

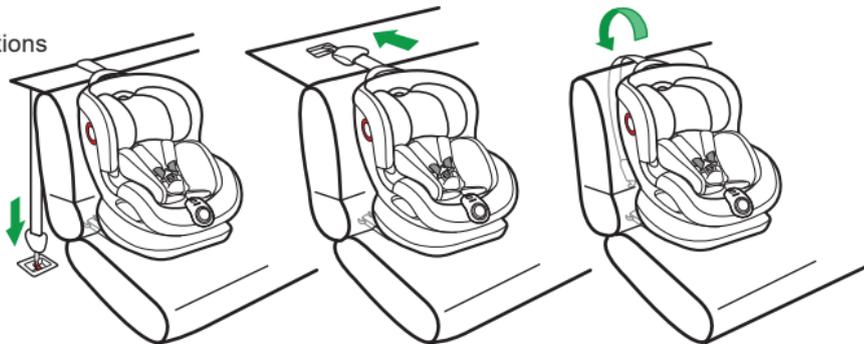

4.3 40-87CM

Seat installation




Step 1

Install the child seat into the vehicle seat (see 4.1 for how to install the seat)

Step 2

Pull the seat rotation lever 11 upwards, and rotate the seat by 90° to the side (see illustration)

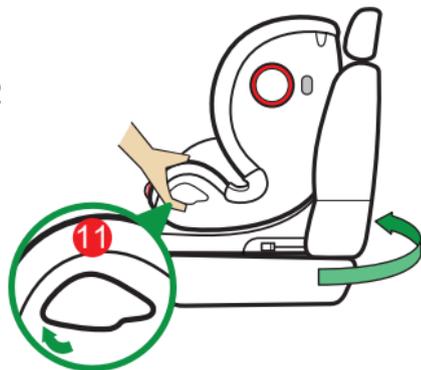

Placing the child in the seat

Step 1

Rotate the recline adjustment dial 10 to the required angle. (For rearward facing installation, the seat must be adjusted to the maximum reclining angle.)

Step 2

Hold down the harness adjuster 8 with one hand, and pull the two shoulder straps outward with the other hand to loosen the straps.



Step 3

Open harness buckle 5

Step 4

Put the child in the seat and place their legs on either side of the buckle pad 6.

Step 5

Pull the headrest adjustment handle 1 above the headrest of the seat, and adjust the headrest to the proper height for your child (see 5.5 for headrest adjustment).



Step 6

Move the shoulder straps over the child's shoulders, and then insert the two buckle latches into the harness buckle 5. When you hear a "click", the straps are firmly fastened.

Step 7

Tighten or loosen the shoulder straps, and adjust them a proper length suitable for the child. (See 5.4 for how to adjust the shoulder straps, do not cross and twist the straps)



! Caution

Grasp both shoulder straps with one hand, and pull the adjustment strap 9 forwards with the other hand slowly.

When the hand with shoulder strap touches child body, stop pulling the adjustment strap. The shoulder straps should be close against the child's chest. (You should be able to fit 2 adult fingers between the child's strap and their chest.)

Step 8

Rotate the seat by 90° to the rearward facing position (so that the child faces the rear windshield) until there is a "click" noise and the indicator next to the rotating adjustment handle turns green.



Step 9

Open the side impact protection nearest to the door (see 5.1 for how to open and close it).

Step 10

Pull the top tether around the side of the seat and insert it into the top tether guide slot 17.

Fit the Top Tether

Step 1

Fitting the top tether (see 4.2 for how to install the top tether).



4.4 76-105CM

Seat installation




Step 1

Install the child seat into the vehicle seat (see 4.1 for how to install the seat).

Step 2

Pull the seat rotation adjuster 11 upwards, and rotate the seat by 90° to the side (see illustration)

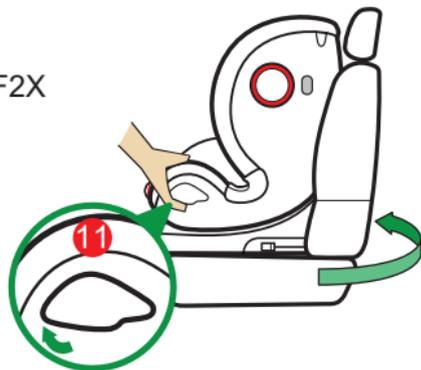

Placing the child in the seat

Step 1

Rotate the recline adjustment dial 10 to the required angle.

Step 2

Hold down the harness adjuster 8 with one hand, and pull the two shoulder straps outward with the other hand to loosen the straps.



Step 3

Open harness buckle 5.

Step 4

Put the child in the seat and place their legs either side of the buckle pad 6.



Step 5

Pull the headrest adjustment handle 1 above the headrest of the seat, and adjust the headrest to the proper height for your child (see 5.5 for headrest adjustment).

Step 6

Move the shoulder straps over the child's shoulders, and then insert the two buckle latches into the harness buckle 5 until you hear a “click” sound.

Step 7

Tighten or loosen the shoulder straps, and adjust them to a suitable length for the child. (See 5.4 for how to adjust the shoulder straps, do not cross and twist the straps)



! Caution

Grasp both shoulder straps with one hand, and pull the adjustment strap 9 forwards with your other hand slowly. When the hand holding the shoulder straps touches child body, stop pulling the adjustment strap. The shoulder straps should be close against the child's chest. (You should be able to fit 2 adult fingers between the child's strap and their chest.)

Step 8

Rotate the seat by 90° to a forward facing position (the child faces the front windshield), until there is a “click” noise.



Step 9

Open the side impact protection nearest the door (see 5.1 for how to open and close it).



Fit the top tether

Step 1

Fitting the top tether (see 4.2 for how to install the top tether).

4.5 100-125CM

EzFix + Vehicle 3-point belt



B2

Hiding the integral 5 point harness.

Step 1

To use the car seat in this stage the integral harness should be hidden, take out cushion **7**.




Step 2

Unbuckle the buckle pad **6** and remove.


Step 3

Open the fastener of shoulder pad **4**, and remove the pad from the connecting buckle **A**.

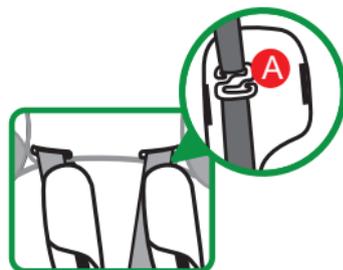

Step 4

Hold down the harness adjuster **8** with one hand, and pull the two shoulder straps outward with the other hand to loosen.

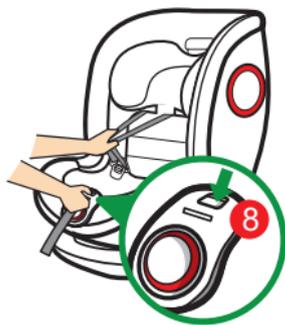

Step 5


Pull the headrest **2** up to the appropriate height, using the adjustment handle **1**.

Step 6

Rotate the harness buckle **5** strap of the T shaped slot by 90° and take it out. Ensure that the buckle is kept in a safe place in dry conditions whilst not in use.

Step 7

Hide the shoulder straps flatly to position **A** behind the fabric cover.

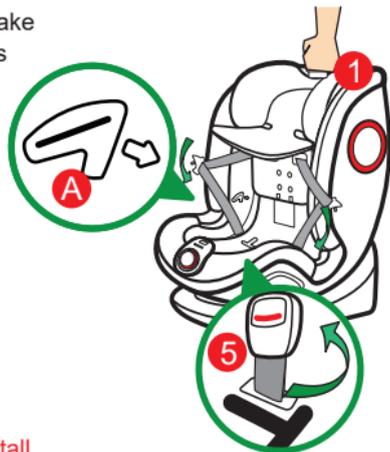

Seat installation


Step 1

Install the child restraint into the vehicle seat (see 4.1 for how to install the seat)

Securing the child


Step 1

Pull the headrest adjustment handle **1** above the headrest of the seat, and pull the headrest up to the proper position.

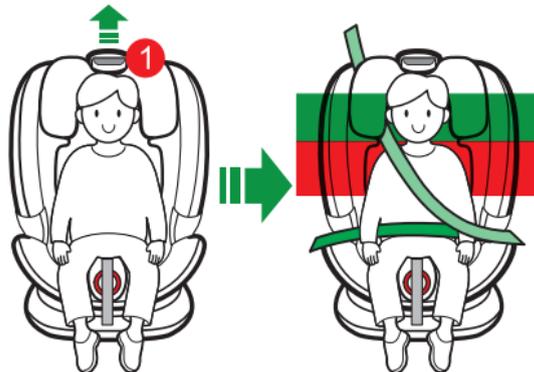

Step 2

Put the vehicle seat belt through the shoulder strap guide hook **12** and over the child's shoulder.

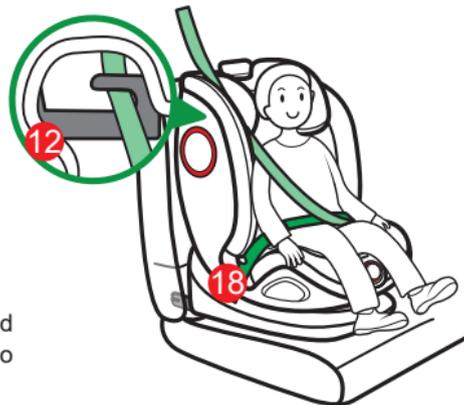

Step 3

Pull the vehicle waist belt through the waist belt guide slot **18** and over the child's lap. Ensure that the lap strap is worn low down so that the pelvis is firmly engaged.

! Caution

The child seat must be as close as possible to the vehicle backrest.

Step 4

Pass the vehicle shoulder belt and waist belt through the belt guide slot 18 on the other side, and buckle the seat belt.



Step 5

Open the side impact protection nearest the door (see 5.1 for how to open and close it)

! WARNING

- Check the vehicle 3-point belt to ensure that the seat and child are firmly secured.
- Do not twist the vehicle seat belt
- The vehicle 3-point lap belt should be worn low down so that the pelvis is firmly engaged.
- Installation of ISOFIX guides 22 is recommended.



Vehicle 3-point belt

Hiding the integral 5 point harness.

Step 1

Hide the 5 point harness belt (for details see 4.5 EzFix + 3-point fitting with hidden integral harness).

Securing the child

Step 1

Secure the child into the car seat (for details see 4.5 securing the child).

WARNING

- Check the vehicle 3-point belt to ensure that the seat and child are secured.
- Do not twist the vehicle seat belt
- The vehicle 3-point lap belt should be worn low so that the pelvis is firmly engaged.



4.6 ISOFIX ATTACHMENT removal


Step 1

Press the clasp of the top tether strap adjustment hook **16**, pull the hook downwards, and then the hook can detach from the anchor point.




Step 2

Press the ISOFIX second lock button **19** and ISOFIX release button **21** at the same time until the ISOFIX separates from the vehicle seat.

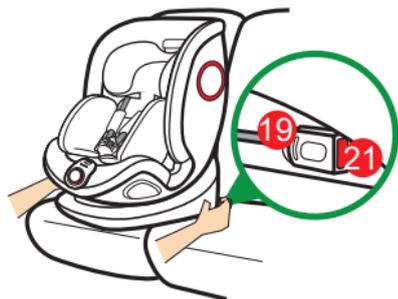

Step 3

Press the ISOFIX second lock button **19** to retract it into the child seat. To make this easier, you can remove one side first and then the other.

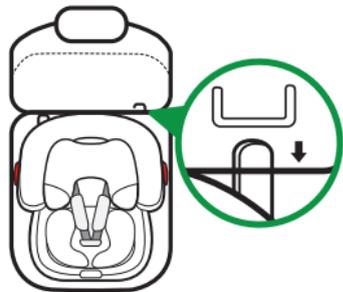


5. Seat adjustment

5.1 Opening and closing the side impact protection

Opening the side impact protection

Step 1

After the child seat is properly secured into the car seat, press the side impact protection button nearest the door. The other side impact protection button may also be pressed at this time. (When using the child car seat, the side impact protection nearest the door must be opened).

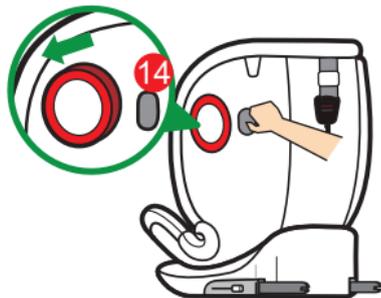

Closing the side impact protection

Step 1

Press and hold the side impact protection button 14 with one hand, press the side impact protection 13 with the other hand and then push inwards to close the side impact protection.



5.2 Recline position adjustment

Step 1

Rotate the recline adjustment dial **10** to adjust the seat to the most suitable position (**clockwise for upright and counterclockwise for reclining the seat backwards**).




! Caution

For rearward facing installation, the seat must be adjusted to the maximum recline angle.

5.3 Forward and rearward rotation adjustment

Step 1

Pull the seat rotation adjuster **11** upwards, and rotate the child seat until you hear a “click” noise and the sign next to the rotation adjustment handle turns green.

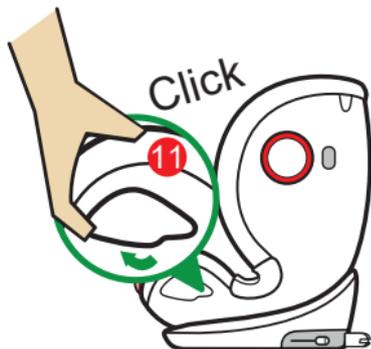


5.4 Shoulder strap adjustment

Loosening shoulder straps

Step 1

Push the harness adjuster button **8** at the front with one hand, grasp the two shoulder straps with the other hand (**grasp the two shoulder straps together, do not pull the shoulder pads**), and pull them forward.

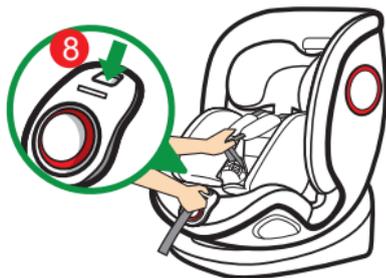

Tightening shoulder straps

Step 1

Grasp the harness adjustment strap **9** and pull downwards as illustrated.



WARNING

- If the harness adjustment strap is stuck when tightening it, you can loosen it first according to the loosening steps and then tighten it again.

WARNING

- Check and tighten the top tether, ISOFIX and harness safety belt to ensure that the seat and child are firmly secured.
- Do not twist or intertwine the top tether or the harness seat belt.
- Installation of ISOFIX guide **22** is recommended for easy installation.



5.5 Headrest height adjustment

Headrest up

Step 1

Pull the headrest adjustment handle **1** above the headrest of the seat, and pull it up.



⚠ Caution

When using the integral harness to fasten the child, you need to loosen the shoulder strap **3** and then lift it up (see 5.4 for how to adjust the shoulder strap)

When using the vehicle seat belt to fasten the child into the car seat the straps can be removed.

Headrest down

Step 1

Pull the headrest adjustment handle **1** above the headrest of the seat and push down on the headrest.

Tip! The headrest can be placed in any position.

5.6 Tightening and loosening the top tether

Step 1

Press the top tether adjustment button **A** to adjust the top tether.




Step 2

Press the clasp of the top tether strap adjustment hook **16**, pull the hook downwards, and then the hook can detach from the anchor point.

Step 3

The top tether **15** must pass under the vehicle seat headrest (if the vehicle seat headrest is not adjustable, the top tether should pass above the headrest).

If the top tether and the top tether adjustment hook are not in use, you can roll it up and keep out of reach of the child.

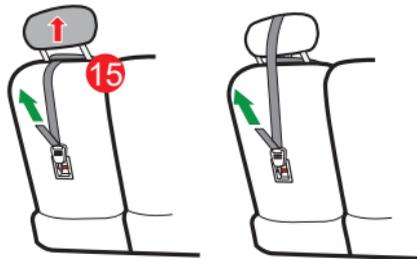


6. Installing and removing fabric cover

6.1 Fabric cover removal

Step 1

Press down on the harness adjuster button **8** with one hand, and pull the two shoulder straps **3** outwards with the other hand to loosen the straps.

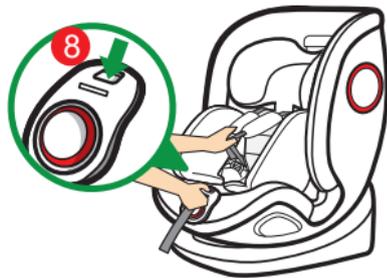

Step 2

Open the fastener of shoulder pad **4**, and remove the pad from the connecting buckle **A**.

Step 3

Open the fastener of the buckle pad **6**, and remove the buckle pad.




Removal of cushion

Step 1

Press the red eject button on the buckle to separate the left and right buckle latches and unbuckle **5**.

Step 2


Take cushion 7 out.

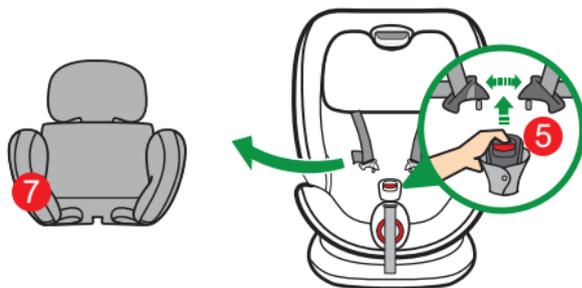

Fabric cover removal


Step 1

Pull the headrest to the highest position, open the fabric cover from the top and remove the headrest fabric from the shell, continue to remove from top to bottom.

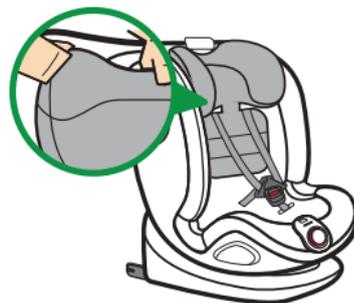

Step 2

Carefully take out the seat cover from the **seam** on the seat side and remove it from top to bottom.

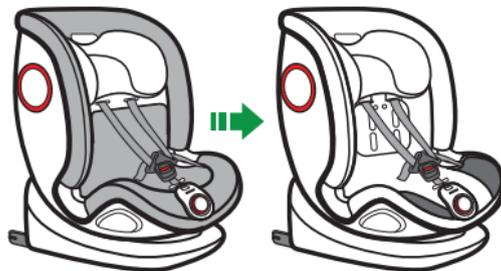

6.2 Fabric cover installation


Fabric cover installation

Step 1

Put the seat cover on the seat frame (the fabric cover plug 23 can be used to insert the fabric inside when installing the cover)



Fabric cover plug

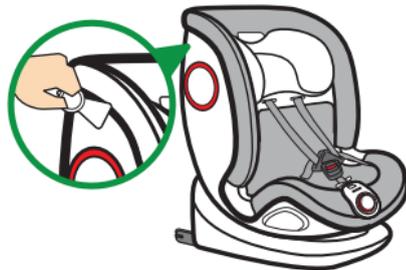

Step 2

Pull the headrest to the highest position and put the headrest cover on the headrest frame.



Installation of cushion

Step 1

Put in cushion 7 onto the seat cover base. (The inner cushions are required when the baby's height is 40-87cm.)



Installation of shoulder pads

Step 1

Insert the two buckle latches into the harness buckle **5** until you hear a “click” sound.



Step 2

Secure the buckle pad **6** on the buckle.



Step 3

Fasten the shoulder pad **4** to the buckle **A**, and seal the shoulder pad fasteners.

7. Cleaning and maintenance

Important tip

The cover is a safety feature. Never use the child car seat without it. DO NOT put your child's safety at risk by using another replacement cover. This could hinder the child car seat from protecting your child as it should do.

Washing instruction:



Caution

1. The cover is removable, and washable at 30°C, line dry only.
2. Plastic parts can be cleaned with a mild detergent or wet towels. Do not use corrosive cleaners (e.g. solvents).
3. The seat belts can be cleaned with a wet towel, and the use of detergents is strictly prohibited.



Max. washing
temperature 30°C



Do not
bleach



Do not
tumble dry



Do not iron



Do not
dry clean

8. Steps to take after an accident

After an impact if the speed was greater than 10km/h, the child car seat should not be used and you should consult your insurer and retailer for further assistance.

9. Warranty

For the seat, we extend a warranty against defects in materials and workmanship for up to one year. The warranty period begins on the date of purchase.

A valid receipt is required for all claims.

The warranty covers a child car seat that has been handled properly and is returned in an orderly and clean condition.

The warranty does not cover:

- Normal wear and tear, and damage due to unreasonable use.
- Damages due to improper or inordinate usage.

Covers: All of our fabrics meet the highest standards regarding colourfastness against UV radiation. Nevertheless, all fabrics fade when exposed to UV radiation.

This is not due to defective materials, but to normal wear and tear, which is not covered by the warranty.

Please contact the manufacturer immediately in the event of a warranty claim.

CHILD INFORMATION
(KEEP WITH CAR SEAT AT ALL TIMES IN CASE OF EMERGENCY)

NAME:

.....

DATE OF BIRTH (DD/MM/YYYY):

.....

ADDRESS:

.....
.....
.....

ALLERGIES/MEDICAL CONDITIONS:

.....
.....
.....

EMERGENCY CONTACT 1:

NAME:

.....

PHONE NUMBER:

.....

EMERGENCY CONTACT 2:

NAME:

.....

PHONE NUMBER:

.....